



Manually Installed Silt Fence

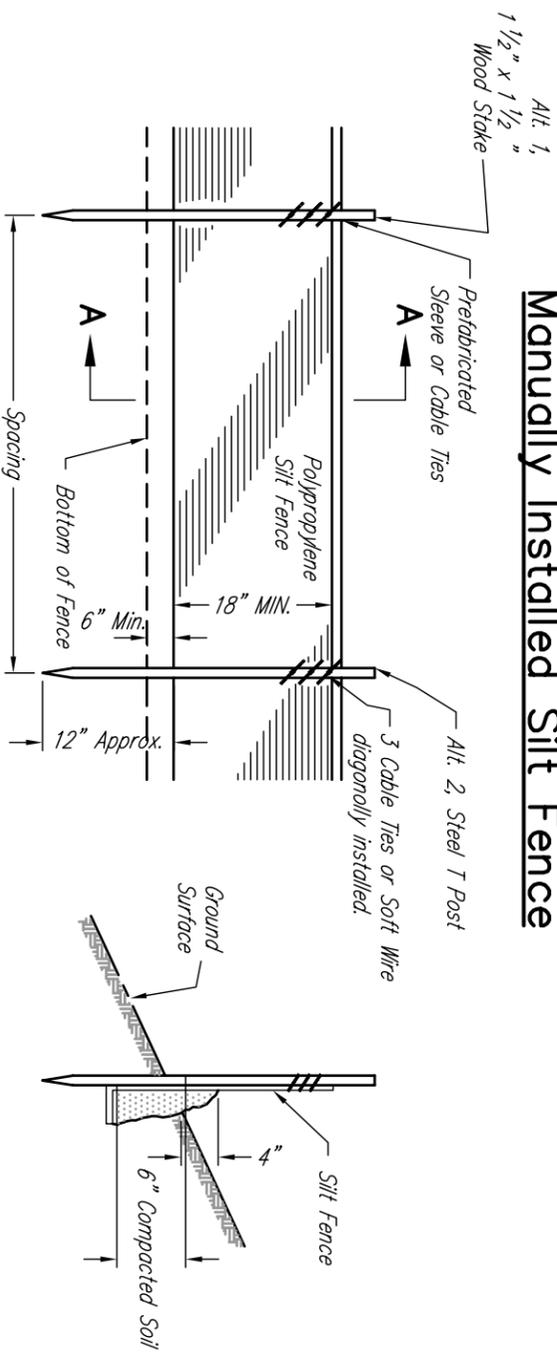


SILT FENCE

Spacing will be 4 feet in pooling areas and 8 feet in non-pooling areas.

Machined Sliced Silt Fence Installation

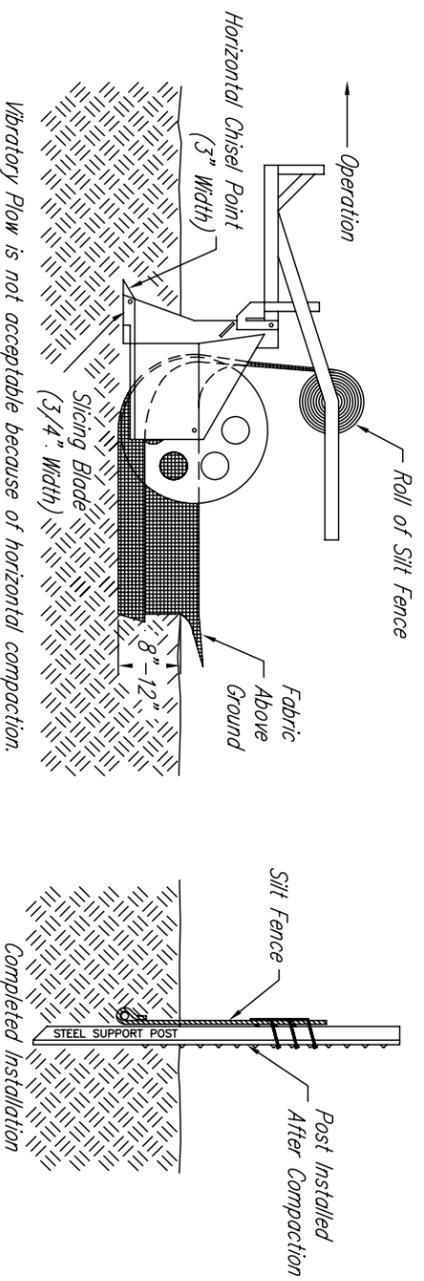


INSTALLATION DETAILS

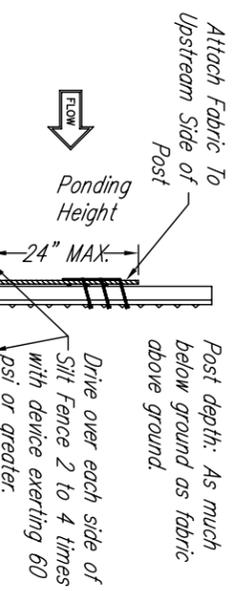

- Attachment details:
- gather fabric at posts, if needed.
 - utilize three ties per post, all within top 8" of fabric.
 - position each tie diagonally, puncturing holes vertically.
 - At a minimum of 1" apart.
 - hang each tie on a post nipple and tighten securely.
 - Use cable ties (50 lbs) or soft wire.

No More Than 24" Of A 36" Fabric Is Allowed Above Ground.

Post spacing: 8' max on open runs
4' max on pooling areas.

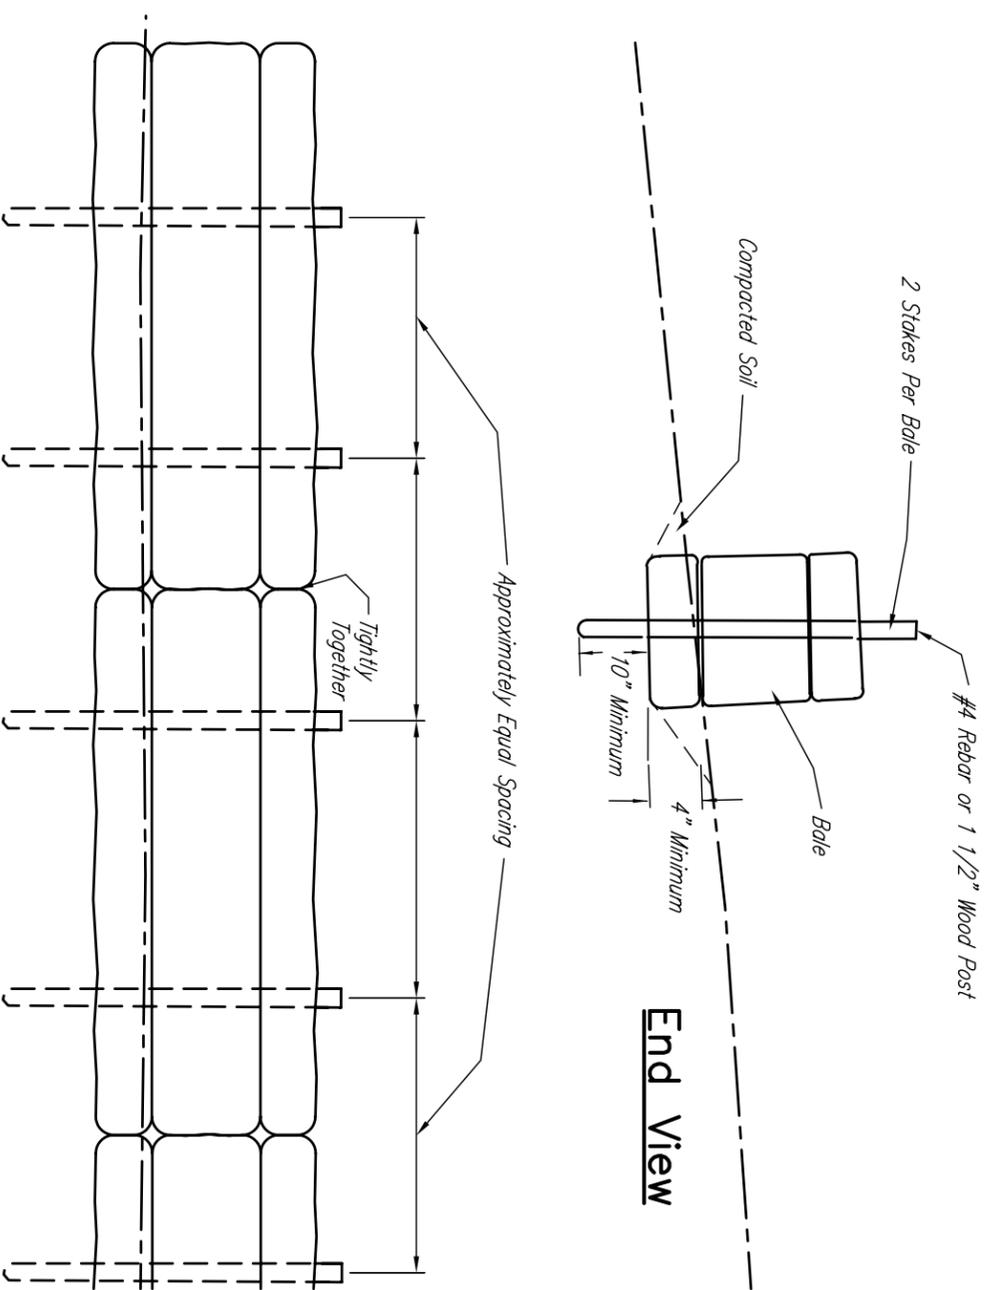

STRAW OR HAY BALE DIVERSION

- Notes:
1. Bales shall be tied or retied with plastic twine. Wire tied bales are not permitted.
 2. Stakes shall be of sufficient size to provide required strength. Broken stakes shall be replaced as needed.
 3. After the bales are staked with rebar or wood stakes, the excavated soil must be backfilled against the bales.

All drawings not to scale.